




eco

bathrooms

COMBI BASIN INSTALLATION ON 500mm W. C. CABINET

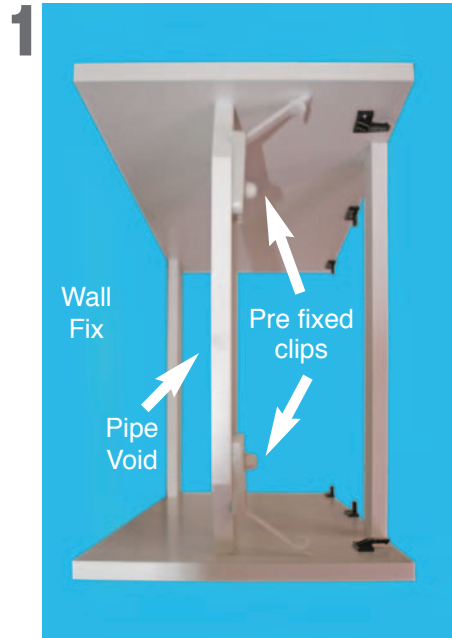

Install furniture with cistern clips fitted.



Plumb & fit basin with taps.
Note: If a Sensor tap is used, ensure the battery pack is positioned in front of cistern support rail to allow for easy battery replacement in the future.



Plumb & fit WC.



Fit furniture fascias.

